



GS120-Pure II QUICK GUIDE

1 - 2 0 0 - 3 6 7 - 0 8 /

#### Step 1:

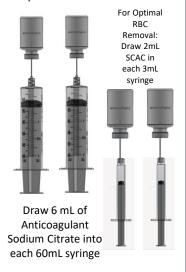


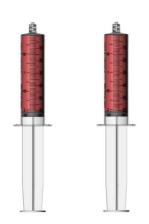

Draw 54 mL of whole blood in each syringe from the patient, filling both syringes to 60mL

#### Step 3:

# REMOVE and DISCARD Red Cap For Optional RBC Removal: flush 1-2mL SCAC through pipe to clear red blood

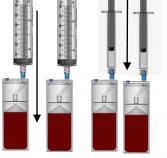

Load anticoagulated whole blood into the **Concentrating Device** 


#### Step 4:



Counterbalance and process the Concentrating Device at

> 1.5 minutes 3800 RPM


# Step 5:

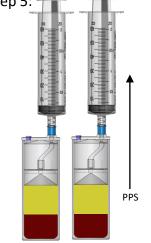

Using the 60mL syringe, aspirate the platelet plasma suspension (PPS) until RBC completely fills the aspirating pipe.

(It's normal to aspirate small amounts of RBC into the syringe while attempting to completely fill the aspirating pipe with RBC. If NO RBC's (Leukocyte Poor PRP) is goal, leave the aspirating pipe free of RBC's)

### Step 6:

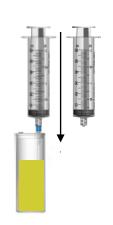

Transfer the platelet plasma suspension (PPS) into the Concentrating Accessory

Aspirate

Platelet Poor

Plasma

Leave

approximately 7mL

#### Step 7:



Counterbalance and process the Concentrating Accessory at

> 7 minutes 3800 RPM

# Step 8:



Platelet Concentrate Buffycoat

Platelet concentrate buffycoat separates out at the bottom of the **Concentrating Accessory** 

## Step 9:

Aspirate platelet poor plasma from the Concentrating Accessory.

Leave 6-7mL of plasma for up to 16x Concentrations

Leave 12mL of plasma for up to 8x Concentrations.

#### Step 10:



Attach the 12mL syringe and swirl to resuspend the platelet buffycoat into the plasma.

Then Tilt to immerse the Aspirating Pipe into the PurePRP®

#### Step 11:



QGGS120Purell11.20.02